

Model: DG458

# DigiSender® ZX7

Wirefree TV for your home

Quad Input 5.8GHz Wireless AV Sender System



Want to transmit to more than 1 room?  
You need a DG45RX Additional Receiver!  
Visit: [www.aei.eu](http://www.aei.eu) for details

**WATCH A VIDEO  
INSTALLATION  
& TROUBLESHOOTING GUIDE**

Available online at: [www.aei.eu/video](http://www.aei.eu/video)

# Contents

---

<b>Introduction</b>	<b>03</b>
<b>Installing your DigiSender</b>	<b>04 - 08</b>
Step 1 - Unpack your DigiSender®	04
Step 2 - Install the Transmitter	05 - 06
Step 3 - Install the IR Systeme Technik™ Remote Relay Kit	07
Step 4 - Install the Receiver	08
<b>Using your DigiSender</b>	<b>09 - 11</b>
Standard Operation	09
DigiSender® Advanced Functions	10
The DigiSender® Remote Control	11
<b>Troubleshooting</b>	<b>12 - 16</b>
Picture Problems	12 - 13
Sound Problems	14
Remote Relay Problems	15
Technical Support & Accessories	16

## Introduction

---

Congratulations on purchasing the DigiSender® ZX7 - Quad Input 5.8GHz Wireless AV Sender System. This product represents state of the art wireless audio and video technology and the most advanced Infra-Red relay technology at exceptional value for money.

You can now enjoy DVD quality video and Hi-Fi stereo sound from your Satellite, Cable, Freeview, DVD or VCR in another room in your home.

The DigiSender® ZX7 is a Quad Input wireless AV sender with a difference. Because it uses 5.8GHz to transmit rather than the much more common 2.4GHz, you can use the DigiSender® ZX7 without the worry of interference from wireless routers, Bluetooth devices and other wireless products operating on 2.4GHz. It also incorporates our advanced DigiEye™ remote relay technology allowing flawless operation with every set top box ever made.


*Benefit from 5.8GHz transmission, 4x Inputs, 4x Audio/Video Channels, 16x Remote Relay Channels and unsurpassed compatibility with the new DigiSender® ZX7!*




# Installing your DigiSender®

## Step 1 - Unpack your DigiSender®


All DigiSender® orders are computer weight checked when packed. However, it is a good idea to check all kit contents are present before proceeding with the installation.

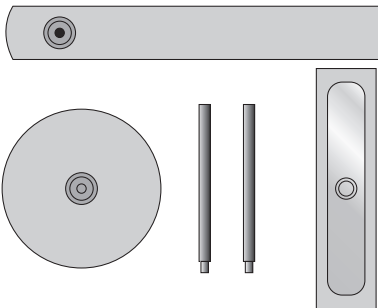


IR Systeme Technik™ Kit

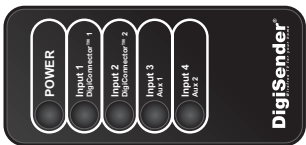


DigiSender® Remote Control

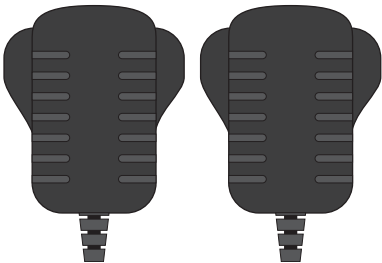

2x Power Supply Units

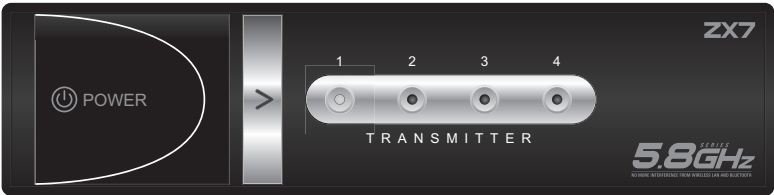

Transmitter

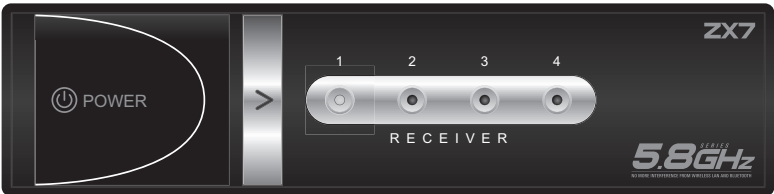

Receiver

# Installing your DigiSender®

## Step 2 - Install the Transmitter


The Transmitter will send the audio and video from up to four connected sources (your Satellite receiver and DVD Player for example) to the Receiver, located in another room in your home.



Connect DigiConnector™ 1 to your Satellite, Cable or Freeview box. Use the SCART socket labelled 'TV' or 'OUT'. Connect any existing SCART lead into the rear of the DigiConnector™.



Connect DigiConnector™ 2 to your DVD Player, HDD Recorder or VCR. Use the SCART socket labelled 'TV' or 'OUT'. Connect any existing SCART lead into the rear of the DigiConnector™.

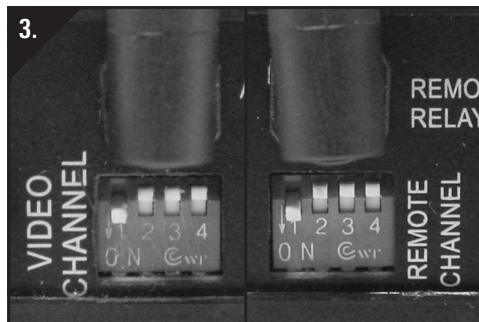

Ensure that the Audio/Video and Remote Relay Channel switches on the back of the Transmitter are set to 1.



Connect the IR Emitter to the socket labelled 'IR' on the back of the Transmitter. See Page 07 for more information on installing the IR Systeme Technik™.

## Installing your DigiSender® *continued...*

---

**Note:** Try to avoid positioning the Transmitter directly on top of other electrical devices as this could lead to a poor picture.



Connect the Power Supply Unit (PSU) to the socket labelled 'PSU' on the rear of the Transmitter.



Connect the Power Supply Unit (PSU) to an available mains socket.

### What's the A/B switch for?

The Contrast (A/B) switch is present to compensate for differences in equipment set-ups.

*If you experience a poor picture after installation is complete, try adjusting the A/B setting.*




## Installing your DigiSender®

### Step 3 - Install the IR Systeme Technik Remote Relay Kit™

Once set up correctly, the IR Systeme Technik™ Remote Relay Kit will enable you to control your source equipment from the receiving location in your home.

Because everyone's set up is different there are many ways you can install the IR Systeme Technik™ Remote Relay Kit and the various included accessories will help you in setting it up correctly.

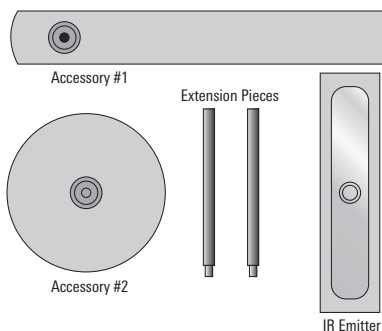

**Example 1:** Mount the IR Emitter vertically using accessories 1 and 2. Ensure the LED is facing the IR sensor on your source equipment.



**Example 2:** Mount the IR Emitter horizontally using the supplied sticky pad. Ensure the LED is facing the IR sensor on your source equipment.


# Installing your DigiSender®

## Step 4 - Install the Receiver

The Receiver will pick up the signals being sent by your Transmitter and output them to a connected TV.




1. Locate a vacant SCART socket on the back of your receiving TV and insert the DigiSender® SCART cable.

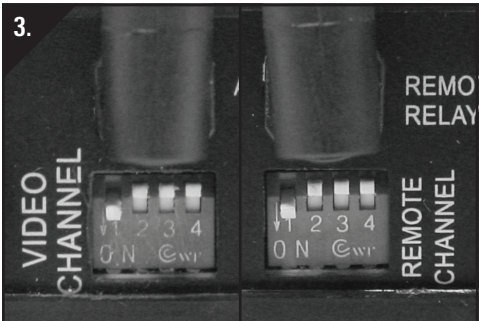

3. Ensure that the Audio/Video and Remote Relay Channel switches on the back of the Receiver are set to 1.



3. Connect the Power Supply Unit (PSU) to the socket labelled 'PSU' on the Receiver.

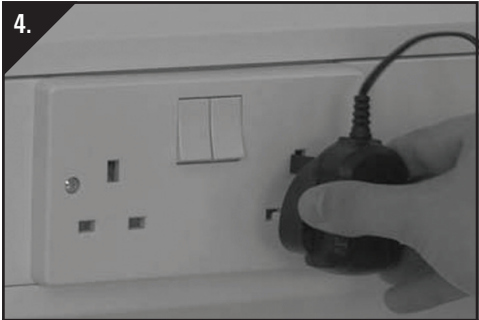

4. Connect the Power Supply Unit (PSU) to an available mains socket.



## Using your DigiSender® Standard Operation


The steps below should be followed every time you use the DigiSender®.



Switch on the source equipment (Satellite, Free-view, DVD, VCR, etc.).




Turn on the Transmitter and Receiver by pushing the Power button on the front of the units. The Power LED will change from red to green to indicate the unit is switched on. *Alternatively press the Power button on the DigiSender® Remote Control.*

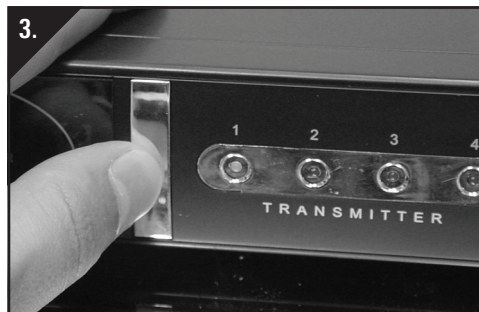

Select the desired Input by pressing the Power button on the front of the Transmitter. The green Input LEDs will light up to indicate which source is active. *Alternatively press the 'Input' buttons on the DigiSender® Remote Control.*



On the receiving TV, select the SCART channel assigned to the SCART socket that you plugged the DigiSender® Receiver in to. This may be labelled as SCART, AUX, AV, VIDEO, VCR or .

# Using your DigiSender®


## Advanced Functions

---

### Changing the Audio/Video Channel

The DigiSender® ZX7 features 4 Audio/Video Channels. Each of these Audio/Video Channels slightly changes the frequency on which the DigiSender® ZX7 operates. Because the Audio/Video Channel switch allows you to ‘fine tune’ the frequency on which your DigiSender® ZX7 operates, it is possible to overcome most interference and reception troubles that may occur.

To change the Audio/Video Channel on your DigiSender® ZX7, simply change the position of the Audio/Video Channel switches as shown below.

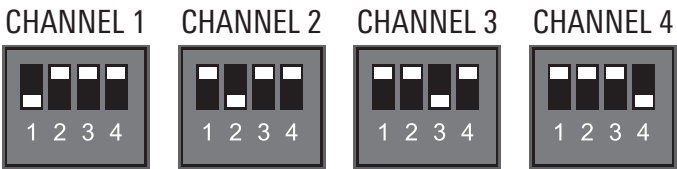

*For your DigiSender® ZX7 to function correctly it is very important that the Audio/Video Channel settings are the same on both the Transmitter and Receiver.*

### Changing the Remote Relay Channel

The DigiSender® ZX7 combines our advanced DigiEye™ technology with the IR Systeme Technik™ Remote Relay kit and features 16 digital Remote Relay Channels.

To change the Remote Relay Channel on your DigiSender® ZX7, simply change the position of the Remote Relay Channel switches. Any combination of up and down switches can be used.

*For your DigiSender® ZX7 to function correctly it is very important that the Remote Relay Channel settings are the same on both the Transmitter and Receiver.*

# Using your DigiSender®

## The DigiSender® Remote Control

---

### 1. POWER

The POWER button will turn your DigiSender® Transmitter or Receiver On or Off.

### 2. Input 1

The Input 1 button will select Input 1 on the Transmitter and Receiver. Input 1 will be what ever source equipment is connected to DigiConnector™ 1. *For example, your Satellite, Cable or Freeview box.*

### 3. Input 2


The Input 2 button will select Input 2 on the Transmitter and Receiver. Input 2 will be what ever source equipment is connected to DigiConnector™ 2. *For example, your DVD Player or HDD Recorder.*

### 4. Input 3


The Input 3 button will select Input 3 on the Transmitter and Receiver. Input 3 will be what ever source equipment is connected to the VCR socket. *For example, your VCR.*

### 5. Input 4

The Input 4 button will select Input 4 on the Transmitter and Receiver. Input 4 will be what ever source equipment is connected to the AUX socket. *For example, your Hi-Fi.*

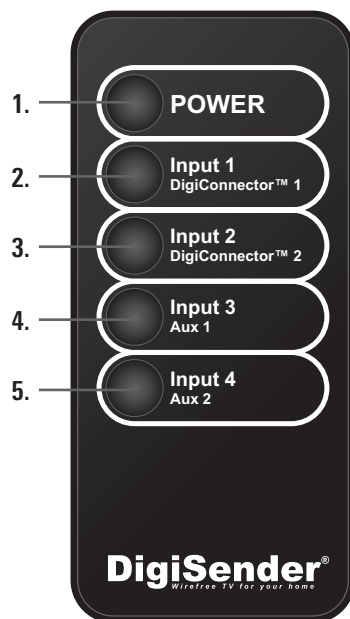

## Troubleshooting Picture Problems

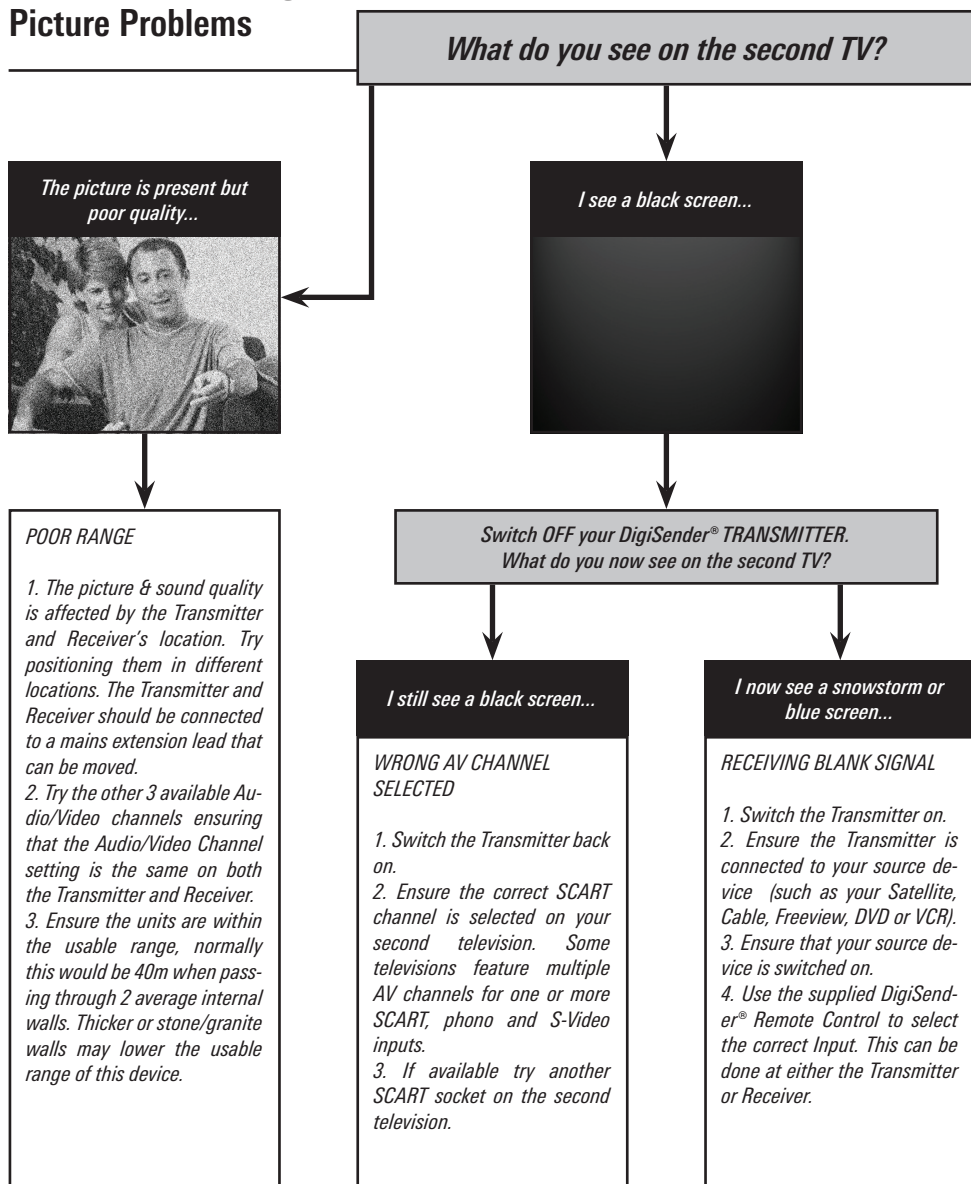

## Troubleshooting Picture Problems

**What do you see on the second TV?**

*I see a snowstorm or blue screen...*



**Switch OFF your DigiSender® RECEIVER.  
What do you now see on the second TV?**


*I now see a black screen...*

### **NOT RECEIVING SIGNAL**

1. Switch the DigiSender® Receiver back on.
2. Ensure the DigiSender® Transmitter is switched on.
3. Try the other 3 available Audio/Video channels ensuring that the Audio/Video Channel is set the same on both the Transmitter and Receiver.

*I still see a snowstorm or blue screen...*

### **WRONG TV CHANNEL SELECTED**

*This indicates that the correct SCART Channel has NOT been selected on the second television. Look for buttons on this televisions remote control which could select the AV Channel such as EXT, AV, VIDEO, VCR, AUX, Channel 0 AND .*

*I see lines over the picture...*




### **INTERFERENCE**

*This indicates one or more electrical devices are interfering with the DigiSender®. Make sure the Transmitter and Receiver are not directly on top of other electrical devices. Try all 4 Audio/Video Channels on your DigiSender® as one or more may still be available. Visit [digisender.net](http://digisender.net) or contact our helpline for information on configuring your equipment to work together.*

# Troubleshooting

## Sound Problems

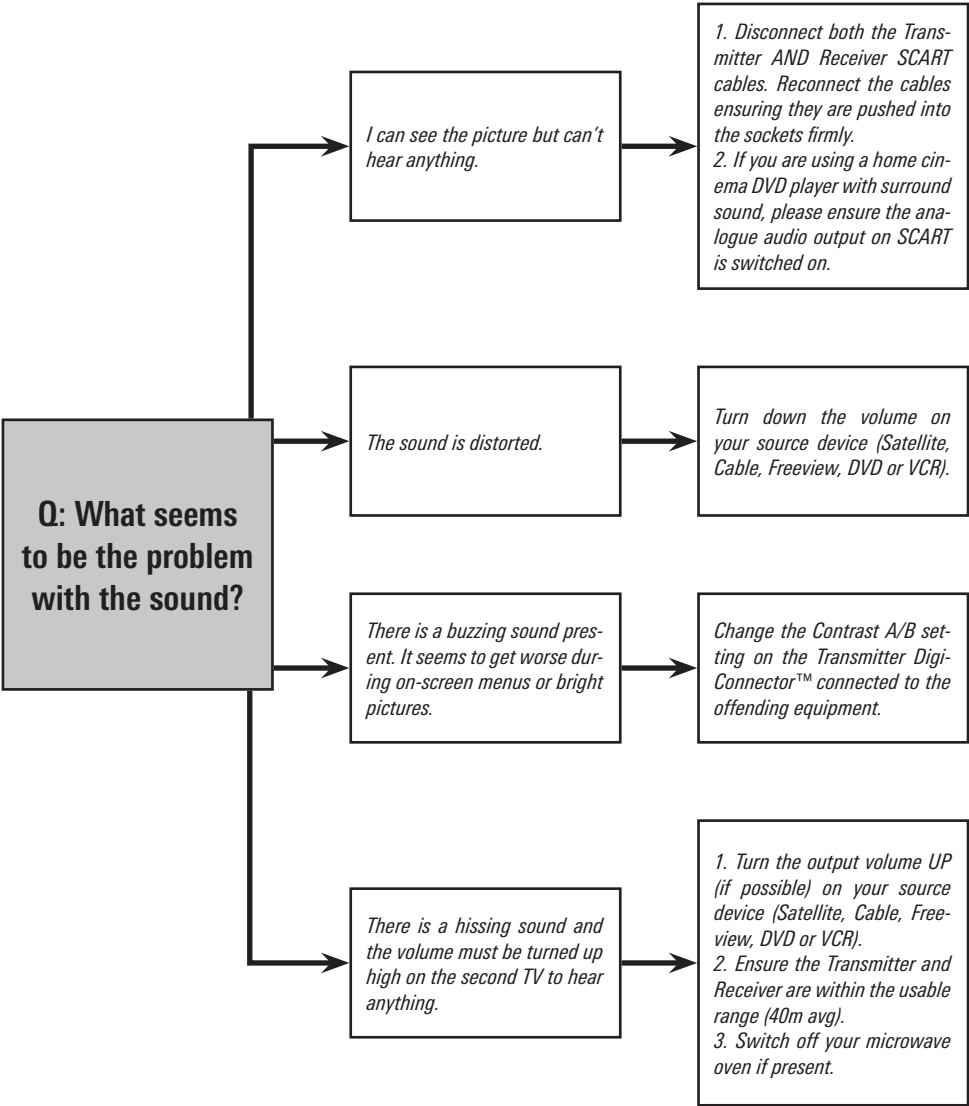

## Troubleshooting

### Remote Relay Problems

---

If you have any difficulty operating your source equipment remote control in your second room please follow the advice below below:

1. Ensure the IR Emitter is connected to the socket labelled 'IR' on the Transmitter.
2. Ensure you are using the correct remote control in the second room. For instance, if you are trying to control your Satellite box you will need to use the Satellite remote control.
3. Ensure the IR Emitter is facing the IR sensor on your source equipment.
4. Move the IR Emitter further away from the source equipment.
5. Move the Transmitter AND Receiver further away from other electrical devices.
6. Try operating your source remote control closer to the Receiver.
7. Replace the batteries in your source remote control.
8. Change the Remote Relay Channel on both the Transmitter AND Receiver.



# Troubleshooting

## Technical Support & Accessories

---

### Technical Support

AEI Security & Communications Ltd is dedicated to providing our customers with first class customer care and technical support.

#### 1. Website

Free technical advice is available online 24/7 at our dedicated support web site: ***www.aei.eu***

#### 2. Online Videos

Watch online Installation and Troubleshooting Video Guides at: ***www.aei.eu/video***

#### 3. Live Chat

Chat to one of our technical advisors live. See website for details.

#### 4. Telephone

We have a dedicated helpline, open Monday to Friday, 8.30am - 4pm. ***Call 02071 931 413.***

### Accessories

If you wish to transmit your source to more than 1 room, this can be achieved by using the additional receiver below.

To purchase visit us online at: ***www.easylife.com*** or call us on: ***02071 931 413.***



#### DG45RX - DigiSender ZX7 Additional Receiver

- Get your Satellite channels to additional TV's in your home!
- Add as many Receivers to your DigiSender® system as you require.
- Requires existing DigiSender® ZX7 Transmitter



## Notes

---

## Notes

---

We,

**AEI Security & Communications Ltd.**

*Weslake Industrial Park, Harbour Road, Rye, East Sussex, TN31 7TE, United Kingdom*

declare under our sole responsibility that the products bearing the series code prefixed:

**DGx, DVx, DXx** (*x refers to the specific model number*)

are in conformity with the essential requirements of Directive 1995/5/EC. These products have been tested against the following standards and specifications:

**Low Voltage Directive**

EN60950:2000

*Safety of information technology equipment.*

**Electromagnetic Compatibility Directive**

EN 301 489-3 V1.3.1: 11-2001

*Specific conditions for Short-Range Devices (SRD) operating on frequencies between 9 KHz and 40 GHz.*

EN 301 489-1 V1.3.1: 09-2001

*Electromagnetic compatibility and Radio spectrum Matters (ERM); Electromagnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements.*

**Radio Spectrum**

EN 300 440-1 V1.3.1: 09-2001

*Electromagnetic compatibility and Radio spectrum Matters (ERM); Short Range Devices; Radio equipment to be used in the 1 GHz to 40 GHz frequency range; Part 1: Technical characteristics and test methods.*

**Power Supply**

EN55022: 2003

*Information technology equipment. Radio disturbance characteristics. Limits and methods of measurement.*

EN55024: 2003

*Information technology equipment. Immunity characteristics. Limits and methods of measurement.*

IEC 61000-3-2: 2001

*Electromagnetic Compatibility (EMC) - Part 3-2: Limits - Limits for harmonic current emissions (equipment input current  $\leq$  16 A per phase).*

IEC 61000-3-3: 2001

*Electromagnetic Compatibility (EMC) - Part 3-3: Limits - Limitations of voltage changes, voltage fluctuations and flicker in public low-voltage supply systems, equipment with rated current  $\leq$  16 A per phase and not subject to conditional connection.*

The product is marked with the CE marking and Notified Body Number according to directive 1999/5/EC.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

**CE 0359**

**AEI** SECURITY & COMMUNICATIONS

*Original Document of Conformity has been signed.*

## **SPECIFICATIONS**

Transmitter Inputs	2x DigiConnector™ SCART, 2x A/V
Receiver Outputs	1x SCART, 1x Composite
Audio/Video Frequency	5.7250GHz ~ 5.8750GHz
Remote Control Compatibility	RC5, RC6, IrDA
Video Input Level	1V Peak-Peak 75Ω
Video Input Colour	PAL (Phase Alternate Line)
Audio Input Level	1.0v PP (Mod 1KHz, Dev 15KHz)
Audio Bandwidth	20Hz - 22KHz (-3dB)
Range	100m (Free-Air), 40m (Nominal)
Power	12V DC, 300mA
Dimensions	L: 100mm, W: 160mm, H: 40mm
Weight	0.32kg

CW220711-1

©2011 AEI Security & Communications Ltd. All rights reserved.

Registered in England: 02831823

AEI Security & Communications Ltd  
Weslake Industrial Park  
Rye Harbour Road, Rye  
East Sussex  
TN31 7TE  
United Kingdom

IR Systeme Technik, DigiEye and DigiConnector are trademarks of AEI Security & Communications Ltd.  
DigiSender is a registered trademark of AEI Security & Communications Ltd.